 


## In the box

 
- 10.1" tablet
- Wall charger
- USB data transfer cable
- Quick Setup Guide
- Important Information

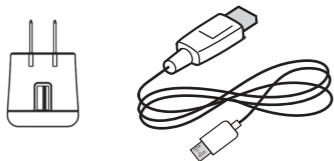

### FIND YOUR USER GUIDE ONLINE!

We are going green so a copy of your *User Guide* is not provided in the box but is available online. To find your manual, touch the ? icon on your tablet or go to [www.insigniaproducts.com](http://www.insigniaproducts.com) on your computer, then click **Support & Service**. Enter **NS-P10A6100** in the box under **Manual, Firmware, Drivers & Product Information**, then click ▶.

## Features

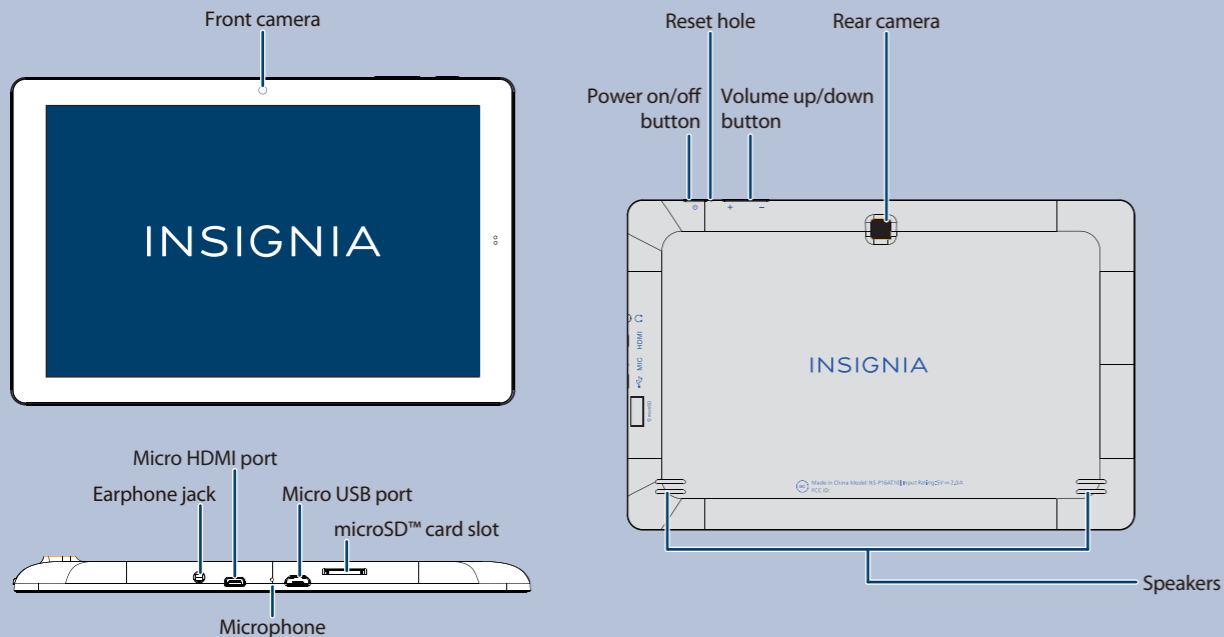


## 1 Charging the battery

**Note:** Charge your tablet fully (six hours) before using it the first time.

- 1 Connect the micro USB cable to your tablet.
- 2 Connect the other end of the micro USB cable to the USB power adapter (wall charger), then plug the adapter into a power outlet. It takes about six hours to fully charge your tablet.

 
**Caution:** Use only the included power adapter or a qualified 5V/2A power adapter to charge your tablet's battery. An incompatible adapter may damage your tablet.

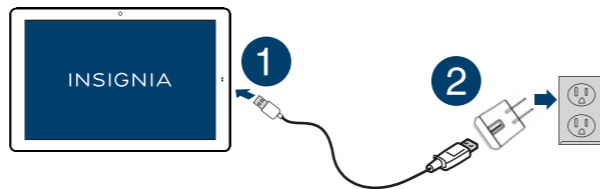

Before using your new product, please read these instructions to prevent any damage.


## 2 Turning on your tablet

 - Press and hold the (power) button on the side of your tablet.

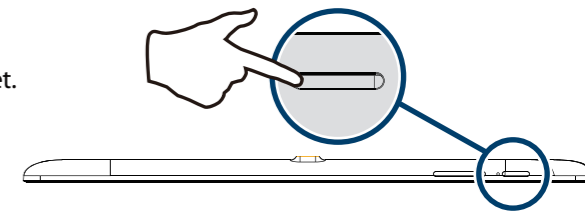

## 3 Setting up your tablet

 
When you turn on your tablet for the first time, you'll be prompted to set up things like Wi-Fi and email. Follow the instructions displayed on your tablet to complete setup.

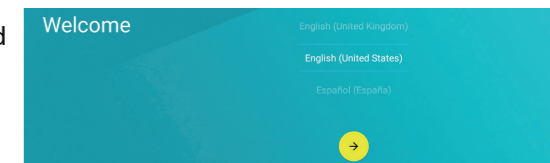

## Connecting to Wi-Fi

To use the Wi-Fi feature, you need access to a wireless access point or hotspot.

 - 1 Tap Apps > Settings > Wi-Fi.
- 2 Tap the slider to turn Wi-Fi **On**, if needed. Your tablet automatically scans for available networks.
- 3 Tap a Wi-Fi network.
  - If the network is open, your tablet connects automatically.
  - If the Wi-Fi icon has a (lock), the network is secured. Enter a password, then tap **CONNECT**. When connected, "Connected" appears under the network name.

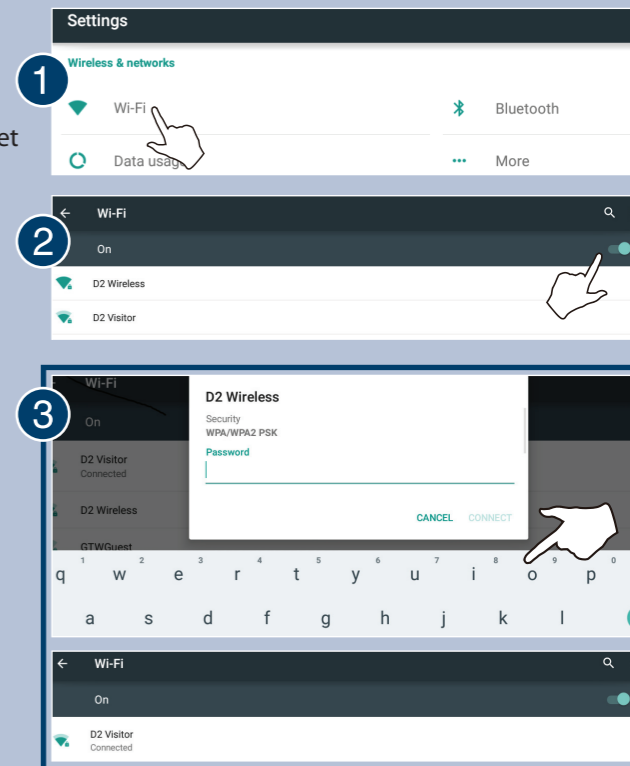


## To open an app:

1 Tap the  (apps) icon.


2 Tap the app you want to open.

  **Note:** If you don't see the app you want, swipe left on the screen to see more apps.

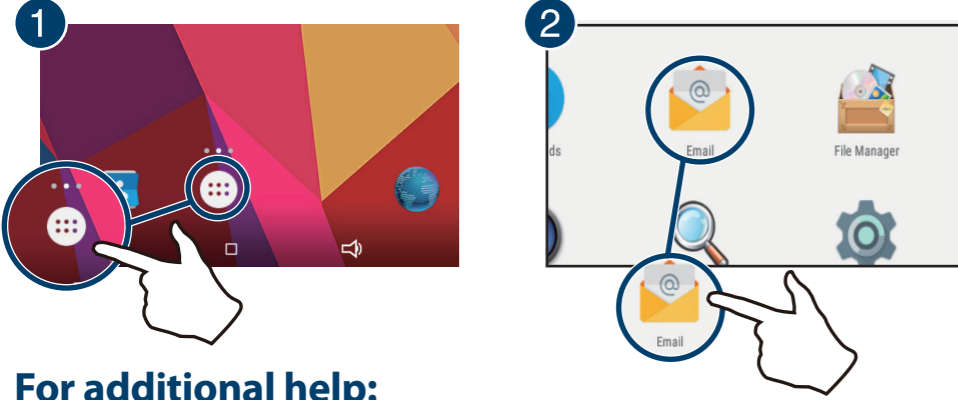





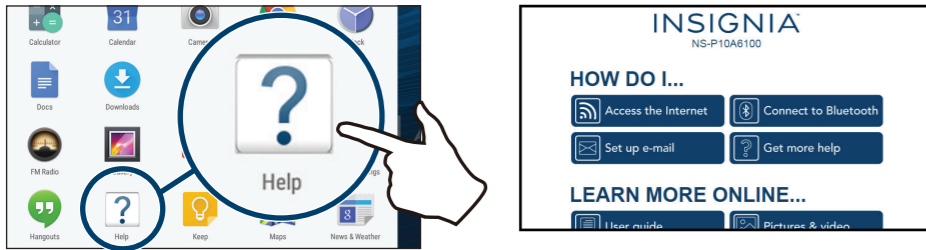

## For additional help:


- Tap **? Help** to open the Help app.

 


## Using gestures to navigate

<b>Tap</b>		Tap an app or another item with your finger to open or select it.
<b>Touch and hold</b>		Touch an item with your finger and do not release it until your tablet responds.
<b>Drag</b>		Touch and hold an item with your finger, then move your finger to the position where you want to place the item.
<b>Swipe</b>		Slide your finger across the screen.
<b>Pinch</b>		Pinch your fingers together or move them apart.
<b>Rotate</b>		Turn your tablet sideways to switch between landscape and portrait. <b>Note:</b> If the orientation does not change, swipe down from the top of your screen with two fingers, then touch <b>Landscape</b> or <b>Portrait</b> to turn off the rotation lock.

## To turn off your tablet:

1 Press and hold  (power) until the *Power off* screen opens.

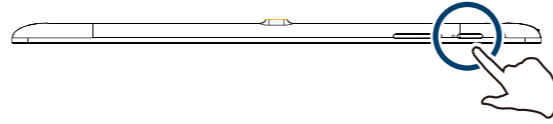

2 Tap **Power Off**.



## One-year limited warranty

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## Need additional help?

Check out our online **community forum** at [www.insigniaproducts.com](http://www.insigniaproducts.com) for helpful information from other Insignia tablet owners.










## We're here for you

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

Android, Google, Google Play, and other marks are trademarks of Google, Inc.

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2015 Best Buy. All rights reserved.  
Made in China

## Function buttons

BUTTON	ICON	FUNCTION
<b>Text search</b>		Search on Google™.
<b>Voice search</b>		Voice search on Google.
<b>Return</b>		Return to the previous screen.
<b>Home</b>		Return to the Home screen.
<b>Multi-task</b>		Open the list of recently used and running applications.
<b>Apps</b>		View all applications installed on the tablet.
<b>Option</b>		Open an options menu.
<b>Close</b>		Close the keyboard.
<b>Menu</b>		Open the side menu.