# My Verizon

You're now part of a growing movement that's about speed, signal and strength. So go ahead, make yourself heard.

REGISTER at verizonwireless com/ myverizon, to learn how to use your

- Go to My Verizon
- Click on Support
- Click on Get Help with Your
- Click on Select Another Device

My Verizon allows you to manage your account, pay your bill, purchase accessories & more.

Assistance is at your fingertips anytime at verizonwireless.com.

Customer Service is at your disposal at 1-800-922-0204 or at any Verizon Wireless Store.

A User Guide is available on demand simply download at support.vzw. com/phones or call 1-877-268-7589 to order a copy.

### Phone Features



- ♠ Earpiece
- LCD Screen
- O Volume Keys
- 4 Left Soft Key 6 Accessory/Charger
- Speakerphone Kev Send Kev
- 8 Alphanumeric Keypad



- **●** Camera Lens
  - microSD™ Slot
- Right Soft Key (B) Clear/Voice Commands
- Power/End Kev ♠ Vibrate Mode Kev

Hand Stran Hole

1035 mm Headset Jack

**10** OK/Directional Key

NOTE: Devices and software are constantly evolving—the screen images and icons you see here are for reference only WARNING! Please use only an approved charging accessory to charge your device. Improper handling of the Accessory/ Charger Port, as well as the use of an incompatible charger. may cause damage to your device and void the warranty.

Camera Kev

6 Back Cover

# Setting Up Your Phone

### Step 1. Remove the Back Cover

- Hold the phone securely with both hands
- 2. Use the fingertip cutout at the top of the phone to pull the back cover off





### Step 2. Insert the Battery

- . Align the battery contacts with the terminals in the battery compartment.
- 2. Push the hattery down until it clicks into place.



# Step 3. Replace the Back Cover

Place the back cover over the battery compartment, then press it downward until it clicks into place.



# Step 4. Charge the Phone

Your device comes with a Wall/USB charger and a USB cable which connect together to charge your phone. To charge your phone:

NOTICE: Please use only an approved charging accessory to charge your LG phone. Improper handling of the Accessory/ Charger Port. as well as the use of an incompatible charger. may cause damage to your phone and youd the warranty.

Before turning on your phone, charge it fully. Be sure to use the charger that came with your phone.



NOTICE: Please make sure that the "B" side faces up before inserting a charger or USB cable into the Accessory/Charger Port of your phone.

### Insert the microSD Card

If you have a microSD Card, slide the microSD card into the microSD Card Slot under the back cover



### Powering your phone On/Off

- . To turn the phone on, press and hold the Power/End Key a until the screen lights up.
- 2. To turn the phone off, press and hold the Power/End Key until the display turns off.

## Making a Call

- 1. Press the OK Key o to unlock the screen (and kevs).
- 2. Enter the phone number using the keypad.

- 3. Press the Send Key \to dial the numher
- 4. Press the Power/End Key to end the call

NOTE: Your phone has a Voice Commands feature that also lets you make calls by saving a phone number or Contact name To access it press the Clear/Voice Commands Key (18) and say Call followed by the name

### Receiving a Call

- . When the phone rings or vibrates. press the Send Key \to answer.
- ringing or vibration for that call.

• Press the Left Soft Key [ Quiet] to mute the

- Press the Right Soft Key [Ignore] to end the call or send it directly to Voicemail.
- Press (TXT) to end the call and send a quick text message
- 2. Press the Power/End Key to end the call.

### Set Up Voice Mail

Dial \*86 (\*VM) and press the Send Key . Then follow the setup tutorial.

# MBM63979801 (1.0) MW

This booklet is made from 60% post-consumer recycled paper.

©2013 Verizon Wireless. All Rights Reserved.



#### Access Voice Mail

From your phone—Dial \*86 and press the Send Key . When you hear the greeting, press # to interrupt, then follow the prompts.

From any phone—Dial your wireless number. When you hear the greeting, press # to interrupt, then follow the prompts.

NOTE: Voice mailboxes not set up within 45 days will be canceled. Your voice mailbox is not password protected until you create a password by following the setup tutorial.

### Ringtones

- 1. From standby mode, press (MENU).
- 2. Press Media Center.
- 3. Press 🖡 Music & Tones.
- 4. Press 📭 My Ringtones.
- 5. Use the Directional Key to highlight a ringtone and press the Left Soft Key [Set As]. You can press [PLAY] to preview the ringtone.

#### Bluetooth®

Allows you to turn Bluetooth on or off and connect to other Bluetooth devices.

- 1. From standby mode, press (MENU).
- 2. Press Settings & Tools.
- 3. Press 🔼 Bluetooth Menu.

4. Press the Left Soft Key [Turn On].

NOTE: By default, your device's Bluetooth® functionality is turned off.

# Text Messaging

Talk with your fingers. Make a bold statement with the touch of a button. For rates and complete information go to verizonwireless.com/messaging.

- 1. Slide open the QWERTY keyboard and select Messaging.
- 2. Press 1! New Message.
- 3. Press 1 TXT Message.
- 4. Enter the phone number of the recipient or the email address for an email message. You can enter up to 20 addresses for a single message.
- 5. Press the Directional Key ( downward to access the text field.
- 6. Type your message in the text field.
- 7. Dans @ [CEND] to and the account
- 7. Press (SEND) to send the message.

#### Camera

Take pictures that you can send to virtually any wireless number or email address. Snap a photo and send as a picture message.

 From standby mode, press the Camera Key 9.

- 2. Choose from the following options:
- Set the brightness by pressing the Directional Key left and right.
- Zoom by pressing the Directional Key 
   up and down.
- Press the Right Soft Key [Options] to set various camera settings.
- 3. Press (TAKE) or the Camera Key to take the picture.
- 4. After taking the picture, select from the following options.
- Press the Left Soft Key [Save] to save the picture.
- Press (SEND) to send the picture to others.
- Press the Right Soft Key [Erase] to erase the picture.

# Backup Assistant<sup>SM</sup>

You can save your phone's address book to a secure server. If your phone is lost or damaged, or if you upgrade to a new phone, Backup Assistant will restore your contacts. Go to verizonwireless.com/baplus.

NOTE: Subject to specific terms of use. See verizonwireless. com/baplus for details.

# Apps & More

Play it up with music, ringtones, wallpapers, apps and games. For details and pricing, go to verizonwireless.com.

Data charges may apply.

#### Verizon Tones

Search, preview, purchase and manage ringback tones and ringtones from your favorite artists all in one place. Go to verizonwireless.com/mediastore.

### Media Store

Find apps for entertainment, travel, productivity, navigation, ringback tones, ringtones, games, wallpaper and more. Go to verizonwireless.com/mediastore.

#### Mobile Fmail

Check email on the go with popular internetbased email accounts, including Yahoo!\* Mail, AOL\* Mail, Gmail\*, Windows Live\* Hotmail\* and Verizon.net.

#### Mobile Web

Take the Internet with you on the go. You can reach the latest news, get the weather and follow your stocks from standby mode, press (MENU). Press (Mobile Web).

#### Verizon SafeGuards

Family and Safety Apps & Services. Get the most robust parental controls. Go to verizonwirelss.com/safeguards.

#### Location Based Services

This phone can determine its location, which is useful for services such as navigation, shopping and weather. For your safety, it's defaulted to only acquire your location when you dial 911. To use Location Based Services, from standby mode, press 

[MENU] > 

Settings & Tools > 

Phone Settings > 

Location.

Your wireless device can determine its (and your)

physical, geographical location ("Location Information") and can associate Location Information with other data Additionally certain applications services and programs are capable of accessing, collecting, storing and using Location Information and disclosing Location Information to others. You should use caution when determining whether or not Location Information should be made available to others and you should review any applicable third party policies before providing access. To limit potential unauthorized access to your Location Information, Verizon Wireless offers various mechanisms and settings to manage access to location data. By enabling location settings you are permitting third party access to Location Information through software, widgets or peripheral components you choose to download, add or attach to your wireless device or through web access, messaging capabilities or other means and you are authorizing Verizon Wireless to collect, use and disclose your Location Information as appropriate to provide you with any location services that you enabled.

# VZ Navigator®

Get premium GPS voice navigations and 3D maps with spoken real-time traffic alerts. Find movie times, event info and gas stations. Go to verizonwireless.com/navigator.

### Customer Information

#### Your Wireless Device and Third Party Services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this wireless device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this wireless device or any non-Verizon Wireless applications, services and products including any personal information you choose to use, submit or share with others. Specific third party terms and conditions, terms of use, and privacy policies shall apply. Please review carefully all applicable terms and conditions and policies prior to using this wireless device and any associated application, product or service.

#### Hearing Aid Compatibility Information

Hearing Aid Compatibility Information
This phone has been tested and rated for use with hearing
aids for some of the wireless technologies that it uses.
However, there may be some newer wireless technologies
used in this phone that have not been tested yet for use
with hearing aids. It is important to try the different
features of this phone thoroughly and in different
locations, using your hearing aid or cochlear implant,
to determine if you hear any interfering noise. Consult
your service provider or the manufacturer of this phone
for information on hearing aid compatibility. If you have
questions about return or exchange policies, consult your
service provider or phone retailer.



Start Here

