

USER GUIDE

DROID
PRO



Congratulations

DROID Pro by Motorola

You work. You have a life. **DROID Pro** by Motorola helps you handle it all, hassle free.

- Stay on top of your work and personal email.
- Manage your hectic calendar, then sync with your computer and favorite websites for anytime access to important meetings and appointments.
- Sync your work and personal contacts.
- View and edit documents from anywhere.
- Use your device as a mobile hotspot to connect up to 5 laptops or other WiFi® devices.
- Browse the web at lightening speeds and view full Flash content.
- Take and share great images and video with a high performing 5MP camera.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

More

- **Answers:** Touch **Launcher icon**  > **Help Center**.

You can also flick your home screen left or right to see the Tips & Tricks widgets.

- **Updates:** Phone updates, PC software, online help and more at motorola.com/mydroidpro.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

Notes:

- All screen shots in this guide are simulated. Actual displays may vary.
- Instructions to perform tasks in this guide may change depending on the software version on your phone.
- Unless specified otherwise, all instructions to perform tasks in this guide assume that you are starting from the home screen.

Your phone

the important keys & connectors



For some features, when you turn your phone, the screen adjusts for you.



Note: Your phone might look a little different.

Contents

Let's go	3
Touchscreen & keys	5
Home screen	8
Calls	11
Contacts	14
Text entry	17
Tips & tricks	18
Digital living	19
Photos & videos	21
Music	25
YouTube™	28
Messaging	30
Social networking	33
Web	34
Personalize	36
Maps	38
Latitude	40
Apps for all	41
Bluetooth® wireless	43
Wi-Fi®	44
Memory card & file management	46
Tools	48
Management	49
Security	50
Troubleshooting	51
Safety, Regulatory & Legal	53

Let's go

 
let's get you up and running

Assemble & charge

1 Cover off




2 SIM in

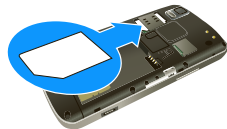


3 microSD in (may already be inserted)



 4 Battery in

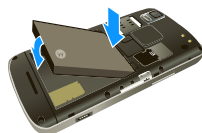

5 Cover on

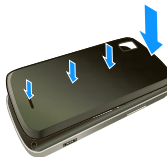 

6 Charge up



Caution: Please read the battery use and safety text in the important legal and safety information packaged with your phone.

Tip: To save battery life, see “Battery tips” on page 19.


Note: Your phone comes with a SIM card pre-installed so you can make and receive calls and text messages while outside of the U.S. in supported areas. If you’re new to owning a SIM card, insert it so that its metal contacts face down and its cut off corner points toward the bottom corner of your phone.

Set up & go

The first time you turn on your phone, a setup wizard guides you through signing in to your Gmail™ account. If you don’t have one, don’t worry, the wizard will help you create one.

After you log into Gmail, you can set up social networking, or you can do it later.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

1 Press and hold Power  on top of your phone to turn it on.

2 Select a language.

4 Let’s go


Power
Key



3 Follow the setup wizard to create or log in to your Gmail account.

Note: If you have an existing Gmail account, your contacts from that account are synced to your phone. Whenever you choose to select all contacts for the one you want, your phone shows every contact, in every groups.

Wi-Fi® connect

If you want to use a Wi-Fi computer network for even faster Internet access, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

Touch **Wi-Fi** to search for and connect to wireless networks. There’s more in “Wi-Fi®” on page 44.

Cool content & more

Browse and download thousands of the coolest apps on the planet from Android Market™. Look in “Apps for all” on page 41.

Your phone comes with a microSD memory card installed—you can load it up with photos, videos, and music from your computer using “Memory card” on page 46.

Touchscreen & keys

a few essentials

Touch tips


Here are some tips on how to navigate around your phone.

 
Touch

To choose an icon or option, *touch* it.




Touch & hold

To open special options, *touch and hold* an icon or other item. Try it: In the home screen, touch  **Contacts**, then touch and hold a contact to open options.

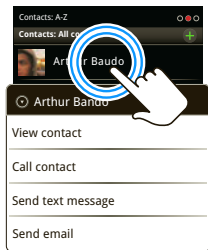

Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch  **Contacts**, then drag your **Contacts** list up or down.

Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.



Flick

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

 
Tip: When you flick a long list, touch the screen to stop it from scrolling.

Zoom

Get a closer look at maps or web pages. To zoom in, *double-touch* the screen. To zoom out, *double touch* the screen again.

You can also zoom in or out by pinching your fingers together or moving them apart on the screen.

Pinch to zoom out.

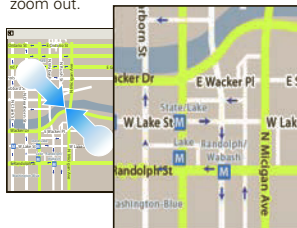

Phone covers

Your touchscreen might stay dark during calls if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.





Screen protectors can also interfere with touchscreen performance.


To find Motorola accessories for your phone, visit www.motorola.com/products.



Key tips

Menu, home, & back




Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and hold Home  to show the last few apps you used, then touch an app to open it.

Touch Search  for text search, or touch and hold for voice search.


Touch Menu  to open menu options, or touch Back  to go back.


Sleep & wake up



To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power . To wake

Power
Key




up the touchscreen, just press Power  again, or open the phone.

To change how long your phone waits before the screen goes to sleep automatically, touch Menu  > **Settings** > **Display** > **Screen timeout**.

Tip: To make the screen lock when it goes to sleep, use “Screen lock” on page 50. To unlock the screen, press Power  or open the phone. Then, drag  to the right.

Power key menu

Press and hold Power  to open the power key menu, where you can turn off the phone (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.

Adjust volume

Press the volume keys to change the ring volume (in the home screen), or the earpiece volume (during a call).





Rotate the screen

When you turn the phone, the touchscreen can rotate to stay right-side up:

Find it: Menu  > **Settings** > **Display** > **Auto-rotate screen**

Quick tips


If you're not sure what to do next, try one of these:

To...	
Get the details —Open a text message, see details for a contact, or open items in other lists.	Touch the message, contact, or item.
See screen menu —Open a menu for the current screen.	Touch Menu  .
See item options —Open an options menu (if available) for an item on the screen.	Touch & hold the item.
Start again —Go back to the home screen.	Touch Home  .

To...


Wake up your phone

—Turn on a sleeping touchscreen.

Press Power  or open the phone.

See recently used apps

—See features that you've used most recently.

Touch and hold Home .

Go to quick launch shortcuts


—Access your quick launch shortcuts.

 
Double-touch Home .

Home screen

quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:

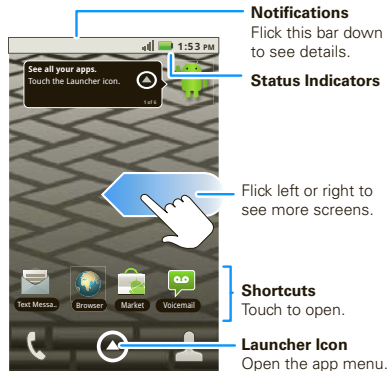


Note: Your home screen might look a little different.

The home screen extends beyond what you see on the screen to give you more room for adding shortcuts, widgets, and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts.



Widgets


A *widget* is small app on the home screen that typically displays information such as weather, news, and social networking updates. You can add a widget, such as a clock, music player, or a calendar that shows upcoming appointments. To open a widget, touch it.

To add a widget, touch an empty spot on the home screen. (You can also touch Menu  > **Add** > **Motorola Widget** or **Android Widget**.) If your home screen is full, you won't see the add option. You'll need to move or delete widgets or shortcuts to make room.

You can change a widget's size. Just touch and hold the widget. When the widget's outline turns white, drag one of the corners to make it the size you want.


Note: If you install apps from Android Market that have widgets, touch and hold the home screen, then select a widget to add to the home screen.

Shortcuts

 
To add shortcuts to the home screen, open the app menu, then touch and hold the shortcut you want. It will be added to the home screen. Or, touch Menu  > **Add** > **Shortcuts**.




App menu

Quick start: app menu

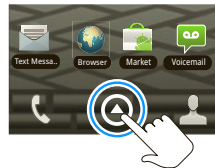

The app menu shows you all of your applications. To open it from the home screen, touch **Launcher icon** .

Flick up and down to see all of your apps. Any new apps that you download (see page "Android Market™" on page 41) are added to the app menu.





To close the app tray, touch  at the bottom of the menu, or touch Home  or Back .

Recent apps

Touch and hold Home  to see the last few apps you used, then touch the app you want. Touch Home  to return to the home screen.

Search

Touch Search  on the front of the phone, or touch Search  on the phone's slide-out keyboard.

Note: You can also use the Voice search key on the keypad.

 


Search by voice.







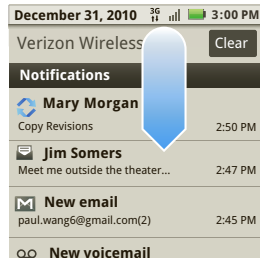









For a text search, touch the text box & type using the keyboard. Then, touch the icon for a text search.

Phone status & notifications

At the top of the screen, icons on the left notify you about new messages or events. Icons on the right tell you about phone status. To access a message, email or meeting reminder, drag the status bar down and touch the notification.



Icons on the right tell you about phone status:

	Bluetooth® active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi® active		3G (fastest data)
	downloading		airplane mode
	vibrate		sync active
	silent		alarm set
	mute call		battery (charging)
	speakerphone active		battery (full charge)

Tip: To see today's date, touch and hold the status bar at the top of the screen.

Calls

it's good to talk

 
Quick start: Calls

Dialing options

From the home screen, touch  **Phone**.



In-call options

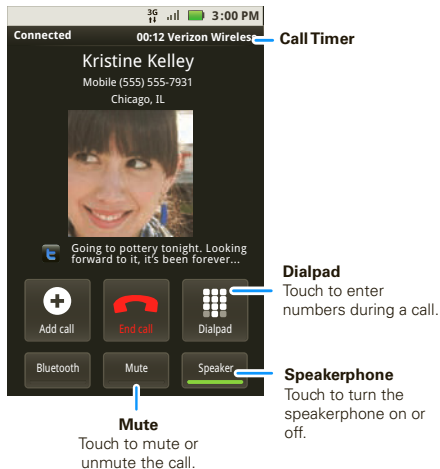

During a call:

- To use a Bluetooth® device, touch **Bluetooth**. (First, turn on your phone and pair it—see “Connect new devices” on page 43.)
- To mute a call, touch **Mute**.

- To use the speakerphone, touch **Speaker**.



Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.


Tip: You can touch Home  or Back  to leave the active call display. To reopen it, touch Home  >  **Phone** > **Return to call in progress**.

Make & answer calls

To make a call, touch  **Phone**, enter a number, then touch .

Tip: If the screen is locked, drag  to the right.

To answer a call while the display is active, touch . When the display is not active, answer by dragging  to the right.

 
To end a call, touch .

To ignore a call, touch **Ignore**.

End calls

Touch .

Note: Your phone includes a proximity sensor. When you hold the phone to your ear, the display goes dark to prevent accidental

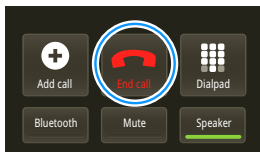


touches. When you move your phone away from your ear, the display lights up again.

Note: Screen protectors can interfere with touchscreen performance. Aftermarket screen protectors must have an opening for the proximity sensor to operate properly. If not, abnormal function might occur if an after-market-protector or protective film covers proximity sensor area at the top of the phone.

Recent calls

Find it:  **Phone** > **Recent**

- To call a number, touch it.
- To send a text message, create a contact, view a contact, or other options, touch and hold an entry.
- To clear the list, touch Menu  > **Clear list**.

Frequent calls

Find it:  **Phone** > **Favorites**


- To call a number, touch it.
- To send a text message, view a contact, or other options, touch and hold an entry.

Conference calls

To start a conference call, call the first number. After the call connects, touch **Add Call**. Dial the next



number, or select it from contacts or favorites. When the next number answers, touch **Merge calls**.

Your phone number

Find it: Menu  > **Settings** > **About phone**
> **Status** > **My phone number**

Emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Touch  **Phone** (if your phone is locked, touch **Emergency Call**).
- 2 Enter the emergency number.
- 3 Touch  to call the emergency number.

Note: Your mobile device can use GPS and AGPS signals to help emergency services find you. See “GPS & AGPS” in your legal and safety information.

Cool down

 
In very limited circumstances, such as where your phone has been exposed to extreme heat, “Cool Down” message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

Contacts


contacts like you've never had before

Quick start: Contacts

Find it:  **Contacts**

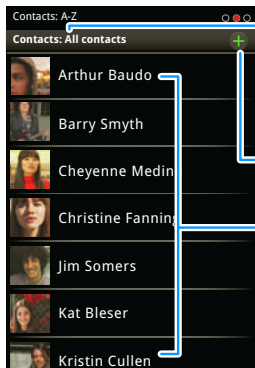

Group

Touch Menu  to choose which group to show (like All or Favorites).

Create Contacts

Contacts List

Touch to view contact information. Touch & hold to call, send a text message, & more.

Tip: To search the list, begin typing a name.

Transfer contacts

Get all your contacts, all in one place. Here's a few helpful hints:

- Use Gmail

All your Gmail contacts will automatically get synced to your phone. Various computer applications for mobile phones and email accounts allow you to export your contacts as a "CSV" file. You can then use Gmail to import the file. For more details, go to www.motorola.com/transfercontacts or log in to your Gmail account on your computer and select "Help".

- Use a SIM


You can transfer contacts from your old phone to your new Motorola phone using your SIM card—see "Transfer contacts using your SIM" on page 14.



- More

There are other methods and tools to help you at www.motorola.com/transfercontacts.

Transfer contacts using your SIM

- 1 On your old phone, copy all the contacts you want to your SIM card.


Tip: For Motorola Android phones, touch  > **Manage SIM card** > **Export contacts** to save your contacts to your SIM card.

- 2 Insert your SIM card in your new phone, see “Assemble & charge” on page 3.
- 3 Import the contacts from your SIM card, touch  **Contacts**, then press Menu  > **Settings** > **Import from SIM card**.

Link contacts

You might have two or more **Contacts** for the same person, maybe a Facebook friend who is also stored on your SIM card, or one friend with two email addresses. To combine these contacts:

Find it:  **Contacts**

Touch a contact to open it, then press Menu  > **Link contact** and touch the second entry.

Call or email contacts

Find it:  **Contacts**




For **View contact**, **Call contact**, **Send text message**, **Send email**, or other options, touch and hold the contact.

View & use contacts

When you set up a social networking account (see “Social networking” on page 33), you’ll know what everybody’s up to and when. Every time you pick up a call, check a message, or look up a friend’s contact info, sure, you’ll see their name and number, but you


can see their social network status and smiling face, too.

Find it:  **Contacts**

- To find a contact, type the contact name.
Touch a contact to open its details. While viewing details, you can start a call or message by touching a phone number or other info. Flick the screen left or right to see **Social Networking** updates or **History**.
Tip: To change which account provides the pictures for your **Contacts**, from the home screen touch **Launcher icon**  >  **My Accounts** > Menu  > **Picture source**.
- To change which group of contacts is shown (**All**, **Facebook**, and so on) touch the filter name at the top.
- To change how you view the list of contacts, flick left or right at the bottom of the screen to select **History** (recently used), **A-Z** (list without status), or **Status** (list with status).

Edit or delete contacts


Find it:  **Contacts**

Touch the contact, then touch Menu  > **Edit** or **Delete**.

Link contacts

You might have two **Contacts** for the same person, such as a friend with two email addresses. To combine these two contacts:

 
Find it:  **Contacts**

Touch a contact to open it, then touch Menu  > **Link contact** and touch the second entry. Your social networking account remembers this connection.

Create contacts

Find it:  **Contacts** > Menu  > **Add contact**

Touch to select a picture for the contact.

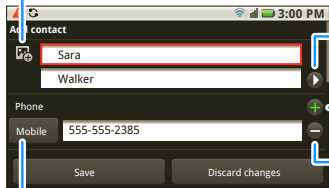

Touch to set the number type.

Touch to add more name details.

Touch to add another number.

Touch to remove this number.

To see more details, flick up.

When you're finished, touch **Save**.

Where are contacts saved? Your phone saves new contacts in its memory and in the Google Server or the subscription-only Backup Assistant, if you have a subscription. It also updates your social networking account. There's more about Backup Assistant on page 51.

Synchronize contacts

When you change one of your **Contacts**, your phone automatically updates your other social networking accounts. Also, your phone updates your **Contacts** and social networking account whenever you change a friend in your social networking accounts.

Groups





Find it:  **Contacts** > Menu  > **Display group**


You can put your **Contacts** into groups that you create (like "friends," "family," or "work"). Then, you can find contacts faster by showing one group at a time.

Text entry

think keyboard, now think smaller


Typing tips


To...	
Enter alternate characters	From the number keyboard, touch Alternate  . Touch again to return to numbers.
Enter one capital letter	Touch Shift  .
Enter only capital letters, until you touch Shift  again	Touch Shift  twice. Touch again to revert to lowercase.
Cut or Copy selected text	Double touch to select text, then drag to left or right to highlight words. Touch and hold on or near the highlighted text and select Cut or Copy .

To...	
Move the cursor	Touch where you want to move the cursor. When you see a red icon, drag it to where you want the cursor.
Paste cut or copied text	Touch and hold location to paste then touch Paste .
Delete a character (hold to delete more)	Touch Delete  .

Physical keypad

 You can type using the phone's keypad.

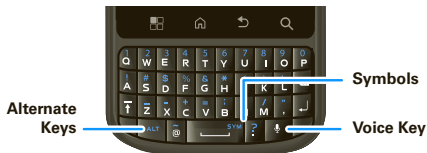


Tip: When you type, your phone shows you word suggestions. You can turn this on/off by touching Menu  > **Settings** > **Language & Keyboard**.


Input methods

To select an input method, touch and hold a text entry area on the screen to open the **Edit text** menu. Touch **Input method**, then touch the method you want.

Multi-touch keyboard

Enter text a letter at a time. As you type, your phone suggests words from your dictionary and chosen language. Your phone also automatically enters apostrophes in some words, like “dont.” You can also touch two keys at the same time, such as Shift  with a letter.









Text input settings

Find it: Menu  > **Settings** > **Language & keyboard**

Tips & tricks





a few handy hints

General tips

- If you can't see the screen while wearing sunglasses, take them off. Screen brightness changes as your phone senses the current lighting conditions.
- To return to home screen, touch Home .
- To see recently dialed numbers, touch  **Phone** > **Recent**.
- To sleep/wake your phone, press Power/Lock .
- To set screen timeout, touch Menu  > **Settings** > **Display** > **Screen timeout**.
- To search, touch Search .
- To show last few apps, touch and hold Home .
- To turn sound on/off, press and hold Power/Lock  > **Silent mode**.
- To turn airplane mode on/off, press and hold Power/Lock  > **Airplane mode**.

Battery tips

Want to extend your battery life? Try these:

- To select a battery profile that suits your phone use, touch Menu  > **Settings** > **Battery Manager**.
- To turn off automatic applications sync, touch Menu  > **Settings** > **Data manager** > **Data Delivery**.
- To turn off Bluetooth power, touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth**.
- To turn off Wi-Fi™, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi**.

Digital living

connect and enjoy

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

Media Share

Media Share gives you an easy way to share your media content—photos, videos, and tunes—with friends and family.

Share your media via DLNA devices: The **Media Share** wizard guides you through the easy setup steps.

Swap photos & videos: Share any photos or videos on your phone, even the ones you created.

More tunes: Enjoy favorites from your phone playlist on your sound system at home. Or get music from your portable music player and add it to your phone’s music library.

Connect



First, connect to a Wi-Fi network or another device:

- Connect to your computer with a USB cable (see “USB connection” on page 47).
- Connect to a Wi-Fi network or use your own Wi-Fi hotspot (see “Wi-Fi®” on page 44).

Media Share will lead you the rest of the way.

Your Media Share world

Note: If you're using a Wi-Fi connection, you must allow access to other devices to download media from your phone and to share your files. If you want to access media files on other devices, they must allow access.



To use **Media Share**, touch **Launcher icon**  >  **Media Share**. Then select the **Media Share** feature you want to use.

 
- **Share media**—Allow other devices to access media files on your phone. Without downloading any media from your phone, other people can view your pictures or videos, or play your songs, on their own devices.
- **Sync media**—Sync the media files on your phone with other devices.
- **Copy media**—Copy a picture from one phone to another.
- **Play media**—Select media for playback on another device in a Wi-Fi network.

Share using DLNA

DLNA lets you expand the ways you can enjoy your photos and videos on a DLNA Certified computer, TV, or monitor, using your own Wi-Fi network.

Make sure your phone is connected to an active Wi-Fi network and has access to a DLNA Certified device.

- 1 Touch **Launcher icon**  >  **DLNA**.
- 2 Touch **Play media**, **Copy media to server**, **Copy media to phone**, or **Share media**. Then follow the instructions you see on your phone.

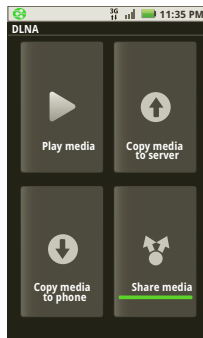

Photos & videos

see it, capture it, share it!

 
Photos

Take & share photos

Take that family photo, and post it online for everyone to see.

Find it: Touch **Launcher icon**  >  **Camera**

Tip: You can also program the side key on your phone to open the camera—see “Programmable side key” on page 37.

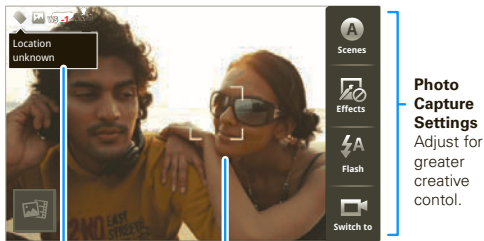

Tag photos with your location.

Touch to focus.

Note: Photos are stored on your microSD memory card.

To take the photo, touch the viewfinder to lock the focus, then touch **Take** to take the photo.

- To **set** the photo as a wallpaper, contact photo, or social network photo, touch Menu  > **More** > **Set as**.
- To **send** the photo in a message or post it online, touch Menu  > **Share**. For more info on sharing your photos, see “Share photos & videos” on page 24.
- To **delete** the photo, touch Menu  > **Delete**.
- For more options, touch Menu  > **More**. “Share photos & videos” on page 24.


Photo options

You can make adjustments to optimize your shot. Touch a button on the right side of the screen to make changes (touch the screen to turn on the buttons if necessary):

- **Scenes**—Adjust for better image capture in different environments: **Auto**, **Portrait**, **Landscape**, **Sport**, and more. Touch the screen when finished to return to the viewfinder.
- **Effects**—Change photo look: **Normal**, **Negative**, **Black and White**, and more.
- **Flash**—Set **Flash On**, **Flash Off**, or **Auto Flash**.

- **Switch to**—Toggle between photo and camcorder modes.

Camera settings

 
In the viewfinder, touch Menu  > **Settings** to open the camera menu and adjust these settings:

- **Picture Resolution**—Adjust for optimal resolution.
- **Video Resolution**—Adjust for best resolution for your needs.
- **Quick upload album**—Automatically upload photos to accounts you select, such as **Facebook**, **MySpace**, **Photobucket**, and more.
- **Review Time**—How long your phone displays a new photo before returning to the viewfinder.
- **Face Detection**— Detects a face in the viewfinder and adjusts image quality accordingly.
- **Exposure**— Select the best exposure for your environment.
- **Shutter Animation**— Select how the viewfinder looks when you take a photo.

Videos

Record & share videos

Find it: Launcher icon  >  **Camcorder**

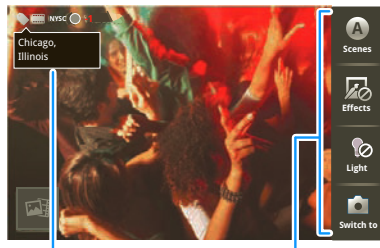




Tag videos with your location.

Video Capture Settings

Adjust for greater creative control.

To record the video, touch **Record**. To stop the video recording, touch **Stop**.


- To **send** the video in a message or post it online, touch Menu  > **Share**. For more info on sharing your videos, see “Share photos & videos” on page 24.
- To **play** the video, touch .
- To **delete** the video, touch Menu  > **Delete**.

Video options

You can make adjustments to optimize your video. Touch one of the buttons on the right side of the viewfinder to make changes (you may need to touch the screen to make the buttons appear):

 
- **Scenes**—Adjust for better video capture in different environments: **Auto** and **Night**
- **Effects**—Change video look: **Normal**, **Negative**, **Black and White**, and more.
- **Light**—Turn a light on or off to adjust for the lighting where you are recording.
- **Switch to**—Toggle between camcorder and camera.

Camcorder settings

In the viewfinder, touch Menu  > **Settings** to open the camcorder menu and adjust these settings: **Video Resolution**, **Review Time**, **Shutter Animation**, and more.

View photos & videos

Find it: Launcher icon  >  **Gallery**

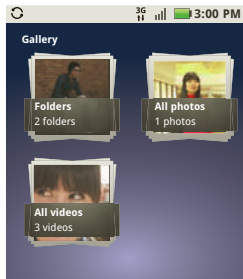

Touch a folder to display all of its photos or videos. option for the photos or videos you want to access.



- **Camera roll**—All of the captured photos and videos on your phone.
- **My Tags**—Photos and videos grouped by tag.
- **Folders**—Photos and videos grouped by the folders where they're saved.
- **All photos**—All photos, no groupings.
- **All videos**—All videos, no groupings.

Note: To see the controls while the video is playing, touch the display.

View photos & videos

Tip: Turn the phone sideways for a widescreen view.

The **Gallery** first displays photos and videos as thumbnails. Scroll through the thumbnails by flicking them up or down. Touch a thumbnail to select it for viewing or playback.

When you select a thumbnail, it is enlarged to normal viewing size. Videos are paused at the beginning. Touch the play  and pause  buttons on the screen to control video playback.

Note: To see the buttons while the video is playing, touch the display.

Share photos & videos

Find it: Launcher icon  >  **Gallery**

To send your photo in a message or post it online:

- 1 Select an image.
- 2 Touch and hold a photo or video, then touch **Share**.
- 3 Choose how you want to share—like **Bluetooth**, **Email**, **Text Messaging**, and more.

Manage photos & videos

Find it: Launcher icon  >  **Gallery**

- 1 Select an image.
- 2 Touch and hold a photo or video, then select **Quick upload**, **Share**, **Edit**, **Delete**, or **More (Set as, Print)**.

Tip: To copy photos to/from a computer, go to “USB connection” on page 47.

 
Music

when music is what you need...

Quick start: Music

Touch and play—instant music. Just open your music library, then select what you want to play.


Find it: Launcher icon  >  **Music**

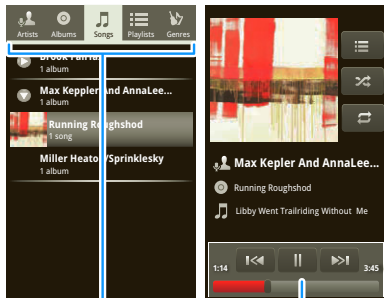

Categories

Touch a category, then find & select the music you want.

Music Controls

Tip: When a song is playing, you can add it to a playlist by touching Menu  > **Add to playlist**.

Set up music

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

What music transfer tools do I need?

To put music on your computer and then load it on your phone, you need:

- Microsoft™ Windows™ PC or Apple™ Macintosh™.
- USB data cable (included with your phone).
- SD memory card (2GB—included with your phone).

Your music is stored on your memory card. Your phone supports removable microSD memory cards up to 32GB capacity. To make sure your memory card is installed, go to “Assemble & charge” on page 3.

Tip: To see the available memory on your memory card, touch Menu  > **Settings > SD card & Phone storage**.

What audio file formats can I play?

Your phone can play many types of files: AAC, AMR, MP3, WAV, WMA, AAC+, and MIDI.

Note: Your phone does not support DRM-protected files.

What headphones can I use?

Your phone has a 3.5mm headset jack for wired stereo listening. You can go wireless with Bluetooth® stereo headphones or speakers (see “Bluetooth® wireless” on page 43).

Get music

You can transfer music from your computer to your phone by using a USB connection.

 
For more information on transferring music, see “USB connection” on page 47.

Play music

Music library

Open your music library, then select what you want to play.

Find it: Launcher icon  >  **Music**

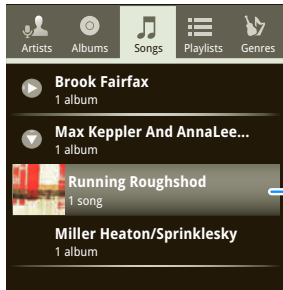


Categories

Touch to select music by artist, album, song, or playlist.

 
Last Played

Touch to play again.

Your music is stored by artists, albums, songs, and playlists. Touch a category, then touch the song or playlist you want to play. Touch Menu  > **Party shuffle** to randomly play all your songs, or touch **Search** to look for a song.

Music player

Just touch a song or playlist to get going.

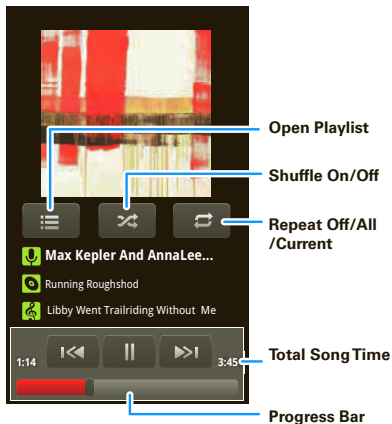

Music player controls

- **Play/pause**—Touch .
- **Previous/next**—Touch .
- **Fast forward/rewind**—Touch and hold .
- **View playlist**—Touch .

- **Shuffle**—Touch .
- **Repeat**—Touch .
- **Volume**—Press the side volume keys.
- **View library**—Touch Menu > **Library**.
- **Turn shuffle on/off**—Touch Menu > **Party shuffle**.
- **Add to playlist**—Touch Menu > **Add to playlist**.
- **Use as ringtone**—Touch Menu > **Use as ringtone**.
- **Delete**—Touch Menu > **Delete**.

Hide, wake, turn off

Touch Home to use another app. Your music continues to play.

When you see in the status bar, a song is playing. Flick down to see details. Touch the song to return to the music controls.

To turn off your music, touch .

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create a new playlist.

To add a song to the playlist you're playing, touch Menu  > **Add to playlist** in the music player.

 
To edit, delete, and rename playlists, touch and hold the playlist in the music library.

YouTube™

create your own classic


Quick start: YouTube

Find it: Launcher icon  >  **YouTube**

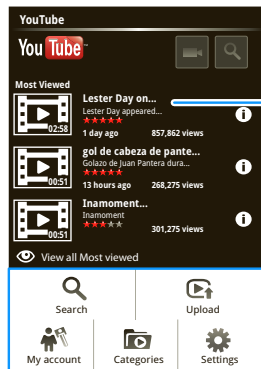

Categories



Touch a video to play.

Press  to show options.




The YouTube user-generated content Web site lets you share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.

Note: If you don't have a YouTube account, visit www.youtube.com to find out more. To create an account or sign in, go to "Your account" on page 29.

Watch videos

See popular video categories, like **Featured**, **Most viewed**, and **Top rated**. Touch a category, then touch the video to start playing it. To see more video categories, touch Menu  > **Categories**. To see a video in high quality, touch Menu  > **Settings** > **High quality video**.


Search for videos

Find it: Launcher icon  >  **YouTube**
> Menu  > **Search**

Enter text, then touch **Search**. To clear your search history, touch Menu  > **Settings** > **Clear search history**.



Share videos

Send someone a link to a video that you are watching.

- 1 Touch the video to select it.
- 2 Touch Menu  > **Share**.
- 3 Address and complete your email, then touch **Send**.

Your account

Log in or create account

Find it: Launcher icon  >  **YouTube**
> Menu  > **My account**

- 1 To create your YouTube account, touch the "Don't have a YouTube account? Touch here to create one" link.
If you already have a YouTube account, enter your username, password and touch **Sign in**.
- 2 For a new account, enter a username, and complete the fields, then touch **I accept**.

Upload videos

Find it: Launcher icon  >  **YouTube**
> Menu  > **Upload**

 
- 1 Touch the video you want to upload. You can change the video title, description, set the access, and add tags.
- 2 Touch **Upload**.

Messaging

sometimes it's best to text, or IM, or email . . .

Quick start: Messaging

Find it: Launcher icon  >  **Messaging**
> **Universal Inbox**

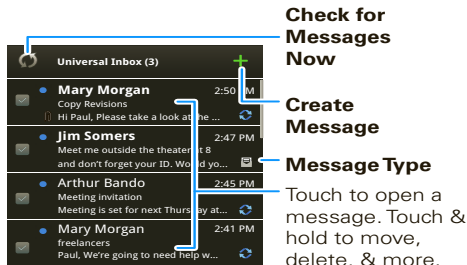

Tip: To see more messages, flick or drag up.

Read & reply to messages

Find it: Launcher icon  >  **Messaging**
> **Universal Inbox**

Note: **Universal Inbox** shows all of your messages together—text, email, and social networking messages. To show only one type of message, touch a message account type instead of **Universal Inbox**.

- To **open** a text message or social networking message and all of its replies, touch it.
- To **reply** to a message, just open it and enter your response in the text box at the bottom.

To **forward** a text message, touch and hold a message in the conversation, then touch **Forward message**.

For email, touch  to choose a reply or forward option.



- To **open options**, touch and hold a message.

Tip: Try the **Messages** widget in “Widgets” on page 9.

Create messages


Find it: Press the Voice key on the keypad and say, “SMS.”

Note: You can also touch


Launcher icon 

>  **Messaging** > .



Choose a message type, such as **Text Messaging** or **Facebook**. Then, enter the recipient and message. In text messages and emails, touch Menu  for options like **Insert...** or **Attach Files**.

Send & receive attachments



To send a file in a message, open a new message and touch Menu  > **Insert**.

When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show **Get HTML version**.

While viewing the attachment, touch it to save it, share it, and more.

Tip: To send and receive large attachments faster, use a Wi-Fi™ connection, in “Wi-Fi@” on page 44.

Set up messaging




To add email accounts, touch **Launcher icon**  >  **My Accounts** > **Add account**.

- **Corporate Sync** is for Exchange server work email accounts. Enter details from your IT administrator.

Tip: You might need to enter your domain name with your user name (like *domain/username*).

- **Email** is for most personal email accounts. For account details, contact the account provider.

Note: While you are using a Wi-Fi network, you cannot access **Yahoo Mail** accounts. You can still use your browser to see these accounts at mail.yahoo.com.




To change your settings, touch **Launcher icon**  >  **Messaging** > Menu , then touch:

- **Manage accounts** to add or remove an account.
- **Edit Universal Inbox** to choose which accounts show messages in the **Universal Inbox**.
- **Messaging Settings** to set the notification for each account type (along with other preferences, for email).

Tip: For social network accounts, see “Add accounts” on page 33.




Email

The first time you turned on your phone (see page 4), you logged in to your Gmail™ account. You can add any other email account that you set up.

To add other email accounts to your **Messaging** widget and **Universal Inbox**: Touch **Launcher icon**  >  **Messaging** > Menu , then touch **Manage accounts** > **Add account**. On the **Setup accounts** screen, touch **Email** and enter your email account information.


Instant messages

To send and receive instant messages, you can use an instant messaging app or your browser. Your device comes preloaded with Google Talk™. You can also download an instant messaging app from the Android Market:

- To download and use an instant messaging app, touch **Launcher icon**  >  **Market** > **Apps** > **Communication**, then choose an app for your provider. Once you download the app, you'll see it in "App menu" on page 9.
- If you don't see an app for your IM provider, you can use your Web browser. Touch Home  >  **Browser** > Menu  > **Go**, then enter your provider's Web site. Once you're there, follow the link to sign in.

Note: Your IM options will depend on your IM provider. To browse instant messaging apps from your computer, go to www.android.com/market.

Voicemail

When you have a new voicemail,  shows at the top of your screen. To hear the voicemail, touch and hold **1**.

If you need to change your voicemail number, in the home screen touch Menu  > **Settings** > **Call settings** > **Voicemail Settings**.

Social networking

my life, your life



Your social networking account

You can set up a social network account that integrates and syncs all your contacts, emails, and social networking sites, and serves them up just the way you want them. No opening and closing apps and menus. You can interact by using the **Social Networking** and **Social Status** widgets on your home screen. These widgets are your windows into the social networking sites and other accounts you entered into your social status.

Add accounts

You can add your more accounts to your social networking account. If you don't have accounts on these sites, visit their Web sites to set them up.

For email accounts, see “Set up messaging” on page 31.

Find it: Launcher icon  >  **My Accounts** > **Add account**

Add an account by touching it. Then enter your user name and password for that account.

When you sign into social networking accounts, you'll see your friends and contacts in your **Contacts** list,

and your status and updates can appear in your **Social Networking** and **Social Status** widgets on your home screen.

Twitter and MySpace messages will always appear as “read” on your phone, but your phone notifies you when you receive a new message. MySpace marks your messages as “read” online.

Tip: To download updates faster, use “Wi-Fi®” on page 44.

Edit & delete accounts

Find it: Launcher icon  >  **My Accounts**

Touch and hold an account, then touch **Open account** to edit it, or touch **Delete account** to remove it (along with its contacts and messages).

 
Note: You can't delete the Google™ account you used or created when you set up your phone. That account is locked when you set it up.

Web

surf the web with your phone

Quick start: Browser

Find it:  **Browser**

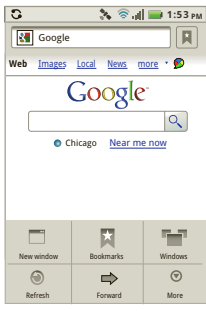


Touch  for browser options.

Note: If you can't connect, contact your service provider.

Connect

Your phone uses the mobile phone network (over the air) or a Wi-Fi connection to automatically access the Web.


Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, touch Menu  > **Settings** > **Wireless & networks**. Touch **Wi-Fi** to turn it on and touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect.

Select links

When you touch a link, your phone outlines it and goes to that page. If you touch and hold the link, your phone shows options, like **Open in new window** or **Bookmark link**.

See options


Touch Menu  to see browser options:

options	
New Window	Open a new browser window.
Bookmarks	See your bookmarks.
Windows	View the browser windows that are currently open.
Refresh	Reload the current page.
Back/Forward	Navigate to previously viewed pages.



options

More See additional browser options.

Download apps



Warning: Apps downloaded from unknown sources can include spyware, phishing, or viruses that affect your phone, phone performance, and personal data. For security, download apps only from trusted sites like  **Market**.



To download apps:

- 1 If you want to download apps from any Web page, press Menu  > **Settings** > **Applications** > **Unknown sources**.
- 2 To launch the browser, touch  **Browser**.
- 3 Find the app you want to download and touch the download link.

Note: Downloaded apps are stored in your phone's memory.

Manage your downloads

To view files or apps you've downloaded, touch  **Browser** >  > **More** > **Downloads**.

To clear your download history, press Menu  > **Clear list**. To cancel, press Menu  > **Cancel all downloads**.

Personalize


add your personal touch

Widgets


Create widgets



- 1 Find an empty spot on your home screen where you want to add a widget. You can flick left or right to open other panels on your home screen.
- 2 Touch and hold the empty spot until you see the **Add to Home screen** menu.
- 3 Touch **Motorola widgets** or **Android widgets**.
- 4 Touch the type of widget. If necessary, enter the widget settings.

Set up widgets

You can customize some widgets. Touch a widget to open it, then touch Menu .

You may already have several useful widgets on your home screen:

- **Messages:** Change the widget name or choose how long it shows new messages. To add email accounts, “Set up messaging” on page 31.
- **Music:** Set this widget to an artist, album, song, playlist, or just touch Menu  > **Party shuffle**. There’s more about “Music” on page 25.

- **News:** Change the widget name, choose how long it shows new stories, or choose a news source. To choose a source, touch , then choose preset **Bundles** or **Channels**, or choose **Custom** to enter a URL for a **Webpage** or an **RSS feed**.
- **Weather:** Change temperature units or add locations. To add locations, touch , enter a city, and touch **Search**. When you open the weather widget, flick left to see other locations you added.

Ringtones

To personalize your ringtones:

Find it: Menu  > **Settings** > **Sound** > **Phone ringtone** or **Notification ringtone**

To set your vibrate options:




Find it: Menu  > **Settings** > **Sound** > **Phone vibrate**

Wallpaper



To apply a new wallpaper:

- 1 Touch and hold an empty spot on your home screen.
- 2 Touch **Wallpapers**.
- 3 Touch **Live Wallpapers**, **Media gallery**, or **Wallpapers**, and choose a wallpaper.

Sounds

- To set volume for media and videos, touch Menu  > **Settings** > **Sound** > **Volume**.
- To play tones when using dial pad, touch Menu  > **Settings** > **Sound** > **Audible touch tones**.
- To play sound on a screen selection, touch Menu  > **Settings** > **Sound** > **Audible selection**, then adjust **Media volume**.

Display settings

- To set display brightness, touch Menu  > **Settings** > **Display** > **Brightness**.
- To set orientation, touch Menu  > **Settings** > **Display** > **Orientation**.
- To set animation, touch Menu  > **Settings** > **Display** > **Auto-rotate screen**.

Note: Some apps are designed so that your phone can “animate” them by rotating, fading, moving, and stretching one or more images.

Quick launch shortcuts

You can add shortcuts directly to the home screen by touching and holding an empty spot on the home screen, touching **Shortcuts**, and selecting a shortcut.

Tip: You can launch your frequently used applications directly from the keyboard. For example set **Search+B** to launch browser, or **Search+D** for the dialer.

Programmable side key

You can set the key on the side of your phone to open the feature you use most.

To set the programmable side key, touch the Quick Launch shortcut on the home screen. To create a shortcut on the the home screen, touch and hold an empty spot on the home screen and select **Shortcuts** > **Settings** > **Quick Launch**.


Date & time

Set date, time, time zone, and formats:

Find it: Menu  > **Settings** > **Date & time**

Language & region

Set your menu language and region:



Find it: Menu  > **Settings** > **Language & keyboard** > **Select language**

Maps

where you are, where you're going

Quick start: Maps

Where am I? What's around here? Don't worry—let Maps help you explore your surroundings and find what you're looking for.

Find it: Launcher icon  >  **Maps**



Note: The map image you see may be a little different.

Set your location sources



Set your phone to determine your location using GPS satellite signals (highly accurate, but uses battery

power) or using the mobile network (less accurate, but conserves battery power).



To set your location, touch Menu  > **Settings** > **Location & security** > **Use GPS satellites** and/or **Use wireless networks**.

Find your location

Note: Don't forget to set your location sources.





From the main Map screen, touch Menu  > **My Location**. Your location is shown on the map as . The bigger the circle, the less accurate the location.

Find any location


- 1 Touch Menu  > **Search**.
- 2 Enter text in the search box, like an address, business, or city, then touch .
- Tip:** If it's an address you have visited before, select from the list shown.
- 3 Touch the search box to view all the results, then touch the one you want.

Get directions

Find your way with turn-by-turn directions. You can even have them spoken so you can keep your eye on the road.

- 1 Touch Menu  > **Directions**.
- 2 Enter a starting point address or touch  and select **My current location, Contacts, or Points on map**.
- 3 Enter an end point address or touch  and select **Contacts** or **Points on map**.
- 4 Select your mode of transport (car, public transport or walk), then touch **Go**. Your directions are shown as a list. To view your directions on a map, touch **Show on map**.
- 5 When you have finished, touch Menu  > **More** > **Clear map**.

Select map mode

Touch Menu  > **Layers** to select from **Traffic, Satellite, Latitude** or recent searches, viewed positions or directions.

Touch Menu  > **Layers** > **More layers** to select from **My Maps, Wikipedia, or Transit Lines**.

Touch **Clear Map** to clear your selections.

Map view

Shows a map, complete with names of streets, rivers, lakes, mountains, and borders. This is the default view.

Satellite view

Shows map on top of aerial photo.

Traffic view


If available in your area, real-time traffic conditions are shown on the roads as color-coded lines.

Latitude

where are your friends & family?

Join Latitude


Keep track of where your friends and family are on Maps. Plan to meet up, check that your parents got home safely, or just stay in touch.

Don't worry, your location is not shared unless you agree to it. You need to join Latitude, and then invite your friends to view your location or accept their invitations. When using Maps (in any mode except in Street View), touch Menu  > **Join Latitude**. Read the privacy policy and if you agree with it, touch **Agree & Share**.

Add & remove friends

Find it: Launcher icon  >  **Maps** > Menu  > **Latitude**


To add friends:

- 1 Touch Menu  > **Add friends**.
- 2 Touch **Select from Contacts**, then touch a contact. Or, touch **Add via email address**, then enter an email address.
- 3 Touch **Add friends**.

If your friends already use Latitude, they'll receive an email request and a notification. If they have not yet

joined Latitude, they'll receive an email request that invites them to sign in to Latitude with their Google account.

To remove friends:



- 1 Touch Menu  > **Latitude** to show your friend's list, then touch a friend in your list.
- 2 Touch **Remove this friend**.

Share location

When you receive a request to share location details you can choose to:

- **Accept and share back**—See your friend's location, and your friend can see yours.
- **Accept, but hide my location**—See your friend's location, but they can't see yours.
- **Don't accept**—Location information is not shared between you and your friend.

Hide your location

To hide your location from a friend, touch Menu  > **Latitude** to show your friend's list. Touch your contact name, then touch Menu  > **Edit privacy settings** > **Hide your location**.

Turn off Latitude

Touch Menu  > **Latitude** to show a friend's list.

Touch Menu  > **Edit privacy settings** > **Turn off Latitude**.


Apps for all

get the app you want

Android Market™

Note: You must set up a Gmail account (see “Set up & go” on page 4) in order to buy and download apps from the Android Market.

Find it: **Launcher icon**  >  **Market**

Get all the fun games and cool apps you want! Android Market provides access to applications developed by developers worldwide, so you can find the app you want. If you need help or have questions about Android Market, touch Menu  > **Help**.

Browse & install apps

Scroll to and touch the app you want to install. Then, touch **Install** (if app is free) or **Buy**.



Warning: If an app you are downloading requires access to your data or control of functions on your phone, you'll be asked to give your permission. After selecting **Install**, the app will download. After selecting **Buy**, you may be asked to sign in to an additional Google™ account. Sign in and select **Purchase now** to proceed. Follow the on-screen instructions. To see the download progress, open the notifications window.

After you download an app, the icon for that app appears on the App tray (see “App menu” on page 9).

Manage & restore apps

Find it: Menu  > **Settings** > **Applications** > **Manage applications**

Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.

To reinstall any downloaded items, touch **Launcher icon**  >  **Market**.

Important customer information

Please be advised that many services and applications offered through this unique device are provided by Google and various application developers. If you use, link to or download a Google service, or an application such as a non-Verizon Wireless location based GPS-type service, chat room, marketplace or social network from this device, you should carefully review the terms of such service or application. If you use any of these non-Verizon Wireless services or applications, personal information you submit may be read, collected, or used by the service or application provider and/or other users of those forums.

Motorola, Inc. and Verizon Wireless are not responsible for your use of those applications or information you choose to submit or share with others.

Specific terms and conditions, terms of use, and privacy policies apply to those applications and services. Please review carefully any and all terms and conditions applicable to those applications and services including those related to any location-based services for any particular privacy policies, risks or waivers.

 
Your Verizon Wireless customer agreement terms and conditions and certain other specifically identified terms govern your use of any Verizon Wireless products and services.


Bluetooth® wireless

lose the wires and go wireless

Quick start: Bluetooth wireless

Find it: Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings**

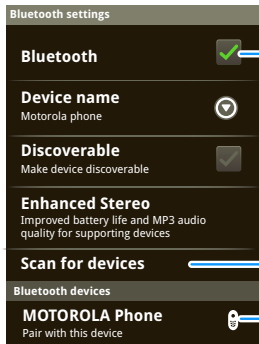

Touch  to turn on & off & to scan.

Touch to re-scan.

Touch to connect.

Turn Bluetooth power on or off

Find it: Menu  > **Settings** > **Wireless & networks** > **Bluetooth**

Note: To extend battery life, turn Bluetooth power off when not in use.

Connect new devices

Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, just turn on the device.


1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

2 Touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings**.

3 Touch **Bluetooth** to turn on and scan. If Bluetooth power is already on, touch **Scan for devices**.

4 Touch a device to connect.

5 If necessary, touch **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Note: The Bluetooth Enhanced Audio setting is not recommended for older Bluetooth headsets as it may not deliver acceptable sound quality.

Reconnect devices

To automatically reconnect your phone with a paired device, simply turn on the device.

To manually reconnect your phone with a paired device, touch the device name in the **Bluetooth devices** list.

Disconnect devices

To automatically disconnect your phone from a paired device, simply turn off the device.

To manually disconnect your phone from a paired device, touch the device name in the devices list, then touch Menu  > **Disconnect**.

Edit properties

Touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings** > **Device name**. Enter a name and touch **OK**.

Wi-Fi®

 
home, office, or hotspot

Quick start: Wi-Fi


Find it: Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**

Note: Your phone's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

Use a wireless network for fast Internet access and to download data.

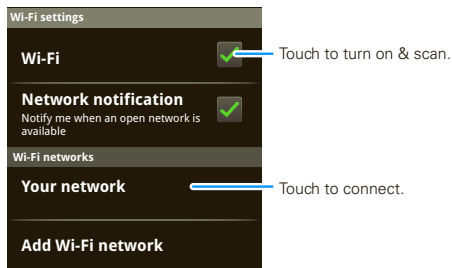



Turn Wi-Fi on or off

Find it: Touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi**


Note: To extend battery life, turn off Wi-Fi power when not in use.

Wi-Fi search & connect

To find networks in your range:

- 1 Touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn on and scan. If Wi-Fi is already on, touch Menu  > **Scan**. Your phone lists the networks it finds within range.

Tip: To see your phone's MAC address or other Wi-Fi details, touch Menu  > **Advanced**.

- 3 Touch a network to connect.
- 4 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and touch **Connect**. When your phone is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

Wi-Fi hotspot

Note: You need to subscribe to Wi-Fi hotspot service to use this feature. Contact your service provider.

You can set up your phone as a Wi-Fi hotspot to provide portable, convenient internet access for up to 5 other Wi-Fi enabled devices.

Setup

Note: Risks can be associated with connecting to the public internet. Your phone allows you to create a 3G Mobile Hotspot, which may be accessible by unauthorized users. It is highly recommended that you use a password other possible steps to protect your computer from unauthorized access. To add security to your Wi-Fi hotspot:

Find it: **Launcher icon**  >  **3G Mobile Hotspot** >  > **Advanced** > **WiFi AP mode Settings**

Touch a setting to modify it:

- **SSID**—Enter a unique name for your hotspot and touch **Next**.
- **Security**—Select the type of security you want, and touch **Save**: **WEP**, **WPA**, or **WPA2**. Enter a unique password. Other users can access your Wi-Fi hotspot only if they enter the correct password.

Note: **WEP** is the weakest option because it is highly vulnerable to hacking. **WPA2** is recommended by IEEE.

- **Channel**—Select a channel that minimizes potential interference. You may need to try different channels after your hotspot is active for a time.

Touch **Save** when the settings are complete.

Activate hotspot

Find it: **Launcher icon**  >  **3G Mobile Hotspot**
> **Tap to start Mobile Hotspot service**

When your Wi-Fi hotspot is active, other Wi-Fi enabled devices can connect by entering your hotspot's **SSID**, selecting a **Security** type, and entering the correct **Wireless password**.

Memory card & file management

copy photos, music, and more to your phone

Memory card

Note: You need the memory card installed for some features on your phone, like **Camera**.


Delete or share files on your phone

Find it: **Launcher icon**  >  **Files** > **Phone files**

Touch a file or folder to open, then touch and hold a file to **Delete** or **Share**.

Remove or format your memory card

Note: Do not remove your memory card while your phone is using it or writing files on it.

Before you remove or format your memory card you need to unmount it. Touch **Menu**  > **Settings** > **SD card & storage** > **Unmount SD card**.


To format your memory card, touch **Format SD card**.

Warning: All data on your memory card will be deleted.

USB connection

You can connect your phone to a computer with a USB cable.

Note: The first time you use a USB connection, your computer may indicate that drivers are being installed. Follow any prompts you see to complete the installation. This may take a few minutes.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.

Note: Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer.

- 2 On your phone, flick down the status bar to see the USB connection options.
- 3 Touch an option:
 - **Windows Media Sync**—Share media files between your computer and phone.

Note: This device can be administered through Microsoft Exchange server security policies. Additional security policies may be applied to your device depending on rules set by your company.

- **USB mass storage**—Drag and drop files between your computer and memory card folders. When you're done, use "Safely Remove Hardware" before disconnecting the USB cable.

Note: You can't use the files on your memory card with your phone while it is connected to the computer.

- **Charge Only**—Use the connection only to charge a device.

V CAST™ Media Manager

Your phone is compatible with V CAST Media Manager, a free desktop application from Verizon Wireless that allows you to transfer photos, music, and videos between your phone and computer. Just install V CAST Media Manager on your computer, then connect your phone and computer with a USB cable. V CAST Media Manager makes it easy to transfer, play, and manage your media. V CAST Media Manager also includes a media player and many intuitive features to help you manage and enjoy your media. To get started, visit www.verizonwireless.com/vmm.

Tools

helping you stay in control

Accessibility

See, hear, speak, feel, and use. Accessibility features are there for everyone, helping make things easier.


Note: For general information, accessories, and more, visit www.motorola.com/accessibility.

Alarm clock

 
Find it: Launcher icon  >  **Alarm& Timer**

To turn on an alarm, touch the check box.

When an alarm sounds, slide to **Dismiss** to turn it off or **Snooze** to delay for five minutes.


To add an alarm, touch Menu  > **Add alarm**, then enter alarm details.

To enable or disable an alarm, touch the check box.

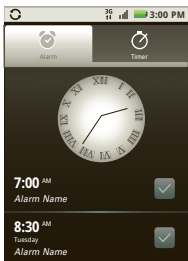


Calendar

Find it: Launcher icon  >  **Calendar**

Your calendar events can be viewed in different ways: Touch Menu  > **Agenda**, **Day**, or **Week**. When you highlight an event, more details appear.

Tip: You can set up multiple calendars through your Gmail account so you can access them from your phone wherever you go.

Add calendar events

From any view, touch Menu  > **More** > **New event**. Enter the event start time and other details. You can even set a reminder so you don't forget about the event. (When you set the reminder time to **0 minutes**, it plays at the event start time.)


Tip: Reminders will play only if you've selected a notification ringtone (see "Ringtones" on page 36).

When you finish entering event details, touch **Save**.

Manage calendar events



To edit an event, touch and hold it, then touch **Edit event**. When you're done, touch **Save**.

To delete an event, touch and hold it, then touch **Delete event**.

To go to today, touch Menu  > **Today**.

Calculator

Find it: Launcher icon  >  **Calculator**

Your calculator has basic and advanced views. To change views, touch Menu  > **Advanced panel/Basic panel**. To clear history, touch Menu  > **Clear history**.

Management


stay in control

Wireless manager

Find it: Menu  > **Settings > Wireless & networks**

Manage all your wireless connections: Wi-Fi®, Bluetooth®, airplane mode, & mobile networks (“Network” on page 50).

Airplane mode

Use airplane mode to turn all your wireless connections off—useful when flying. Press Power/Lock  > **Airplane mode**.

Update my phone

Stay up to date with the latest software updates for your phone. You can check, download and install updates using your phone, or using your computer:

- Using your phone:

You may get an automatic notification of an available update on your phone. Simply follow the instructions to download and install.

To manually check for updates, touch Menu  > **Settings > About phone > System updates**.

Your phone downloads any updates over your mobile network. Remember, these updates can be


quite large (25MB or more) and may not be available in all countries. If you don't have an unlimited data plan, or mobile network updates are not available in your country, you can update using a computer.

- Using your computer:

On your computer, go to www.motorola.com/myvenus2 and check the "Software" links. If an update is available, simply follow the installation instructions.

Network

You should not need to change any network settings. Contact your service provider for help.

 
Touch Menu  > **Settings** > **Wireless & networks** > **Mobile networks** to show options for roaming networks, network selection, operator selection, and access point names.

Security

help keep your phone safe

Quick start: Security

Find it: Menu  > **Settings** > **Location & security**

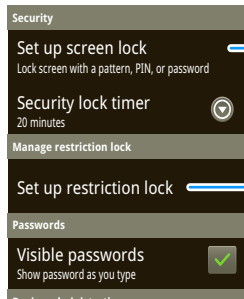

You'll need to slide the "unlock" icon when you turn on your screen.


You'll enter a code when you turn on your screen.



You can set a pattern, PIN, or password to prevent unauthorized access to your device.

Screen lock


Note: You can make emergency calls on a locked phone (see "Emergency calls" on page 13). A locked phone still rings, **but you need to unlock it to answer.**

Lock the screen in the following ways:

- Press Power/Lock .
- Let the screen time out (don't press anything).
- Switch the power off.

To unlock the screen, press Power/Lock . Then, drag  to the right.


Lock pattern

To set the lock pattern, touch Menu  > **Settings** > **Location & security**.

Follow the instructions to draw your lock pattern.

When prompted, draw the pattern to unlock the phone.

Passcode lock

To set the passcode, touch Menu  > **Settings** > **Location & security**.

Enter password, then confirm it.

When prompted, enter the password to unlock the phone.

Forgot your pattern or passcode?


If you forget your pattern or passcode, see your service provider.

Troubleshooting

we're here to help

Backup AssistantSM

Backup Assistant is a free service from Verizon Wireless that saves your phone's address book to a secure server. If your phone is lost or damaged, or if you upgrade to a new phone, Backup Assistant will restore your contacts.


- 1 From the home screen, touch **Launcher icon**  to see your applications.
- 2 Touch **Backup Assistant**, and then enter your password.

Note: Subject to specific terms of use. Results may vary based on backup schedule and other factors. See verizonwireless.com/backupassistant for more details.

Crash recovery

In the unlikely event that your phone stops responding to touches and key presses, try a quick reset. Remove the back cover and battery ("Assemble & charge" on page 3), then replace and switch your phone on as usual.

Reset

To reset your phone to factory settings and erase all the data on your phone, touch Menu  > **Settings** > **Privacy** > **Factory data reset** > **Reset phone**.

Warning: All data on your phone will be deleted. (Nothing on your memory card is deleted.)

Service & repairs

If you have questions or need assistance, go to <http://www.motorola.com/support>, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-734-5870 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Safety, Regulatory & Legal

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the mobile device or battery come in contact with water.*** Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** Excessive heat can damage the mobile device or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- **Don't dry a wet or damp battery with an appliance or heat source,** such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the battery or mobile device.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures.**

* **Note:** Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection),

Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your product's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.

- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the “Smart Practices While Driving” in this guide and at www.motorola.com/callsmart (in English only).

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.



To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Small Children

Keep your mobile device and its accessories away from small children.

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.




Potentially Explosive Atmospheres




Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Symbol	Definition
	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.
	For indoor use only.
	Listening at full volume to music or voice through a headset may damage your hearing.

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

- Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is 1.39 W/kg, and when worn on the body, as described in this guide, is 1.34 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

Information from the World Health Organization

"Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body."

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

European Union Directives Conformance Statement

CE 0168



[Only Indoor Use Allowed In France for Bluetooth and/or Wi-Fi]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



Product
Approval
Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5. This Class B digital apparatus complies with Canadian ICES-003.

GPS & AGPS

Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your mobile device can also use *Assisted Global Positioning System* (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information

may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Emergency Calls

When you make an emergency call, the cellular network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Performance Tips

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices.

Navigation

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Smart Practices While Driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only may be required. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When

driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where

no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device’s keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device’s security, install it as soon as possible.
- **Secure Personal Information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.
Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support
- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- **Applications**—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
- **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that

require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

To care for your Motorola mobile device, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your mobile device in a microwave oven.



dust and dirt

Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



shock and vibration

Don't drop your mobile device.



protection

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

Perchlorate Material – special handling may apply when the battery is recycled or disposed of. See www.dtsc.ca.gov/hazardouswaste/perchlorate
There is no special handling required by consumers.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. To maintain the published Hearing Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find

results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY, INC.

OSS Management
600 North US Hwy 45
Libertyville, IL 60048

USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large. To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please press Menu Key > **Settings** > **About Phone** > **Legal & Safety** > **Open source licenses**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola Mobility, Inc. warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions (Products and Accessories)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions (Software)

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software, and applications, please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	1-800-734-5870
Canada	1-800-461-4575
TTY	1-888-390-6456

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if

applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Copyright & Trademarks

Motorola Mobility, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048
www.hellomoto.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA, the Stylized M Logo, MOTOBLUR and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Google, the Google logo, Google Maps, Gmail, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc. Facebook is a registered trademark of Facebook, Inc. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. Apple, Macintosh, Quicktime and Quicktime logo are registered trademarks of Apple Computer, Inc. iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved. DROID is a trademark of Lucasfilm Ltd. and its related companies. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.
Manual Number: 68014292001-A

www.motorola.com

